


How to Fit

a Roman Blind (FACE FIT)

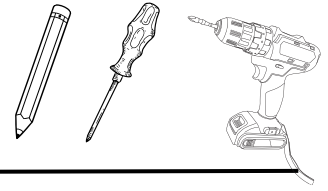

You will need a screwdriver, a drill, a spirit level, a tape measure and a pencil.

Step 1 - MARK THE BLIND

Drop the blind fully down and hold it in position where you want it mounted on the wall. Check the top edge of the blind is level using a spirit level. Once level, mark a line along the top of the blind using a pencil. This will act as your reference line for bracket placement.

Step 2 - MARK BRACKETS

Mark the positions for the end brackets, approximately 50mm in from each end of the blind. Evenly space any additional brackets along the length of the blind, between the end brackets. Then, ensure the top edge of each bracket aligns with the pencil line you've marked.

Step 3- FIX BRACKETS

Drill holes at each marked bracket location and secure the brackets to the wall using suitable fixings for your surface type.

Step 4- REMOVE CLIPS

Before attaching the blind, remove any brown travel clips from the headrail. These are for transit only and must be discarded before fitting.

Step 5- ATTACH BLIND

Loosen the Velcro on the back of the blind to give you better access to the brackets. On each bracket, slide the clip to the right to open the catch. Slot the headrail of the blind onto the front of the brackets. Finally, secure the blind by sliding the clip back to the left, locking it into place.

Step 6- ADJUST

Reattach and smooth down the Velcro on the back of the blind. Check the blind is level. If adjustments are needed, use the toggles on the back of the blind to fine-tune the positioning.

Scan here to
watch our
fitting video.

Need help?

Our customer service team is here to help!
Call 01205 601115 or email
sales@directordercurtains.co.uk

Roman care instructions

All made-to-measure Roman blinds should be professionally dry cleaned to preserve their quality, texture, and colour. Each blind includes a care label attached to the lining for easy reference. To keep your blinds looking fresh between cleans, use a vacuum cleaner with an upholstery brush attachment to gently remove dust and maintain a crisp appearance.

Roman blinds require minimal dressing After installation, simply lower the blind fully and use a handheld steamer to delicately remove any creases, working from top to bottom. Take care not to over-steam or let the fabric become damp. Avoid touching the face fabric directly to prevent marks or water spots.

Once steamed, allow the blind to hang freely for several hours so the folds can settle naturally. This gentle process helps your Roman blind achieve its smooth, tailored look and ensures it hangs beautifully in your window.

Need help?

Our customer service team is here to help!
Call 01205 601115 or email
sales@directordercurtains.co.uk