


How to Measure

for SimplyTwist Roman Blinds

You will need a pen and paper, and a tape measure.

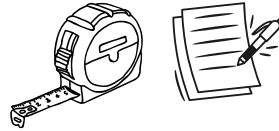

Step 1 -

Firstly, remember your blind will sit in front of any obstructions. Check that there is enough room in front of any obstructions for the blind to fit in your recess.

Step 2 - RECESS FIT


For a recess fit, measure in three places, taking the smallest measurement for each. Measure the width as accurately as possible, from wall to wall, at the top, middle and the bottom. Make a note of the smallest measurement.

Step 3 -

For the drop, measure from the top of the recess down to the window sill, on the left, the middle and the right. Again, take a note of the smallest measurement of all three.

Is your recess solid?

Because of a heavy bracket system, your recess needs to be solid. E.g., if your recess moves when pushed, or if you have plasterboard with nothing behind it, then your window won't be suitable for No-Drill Roman blinds.

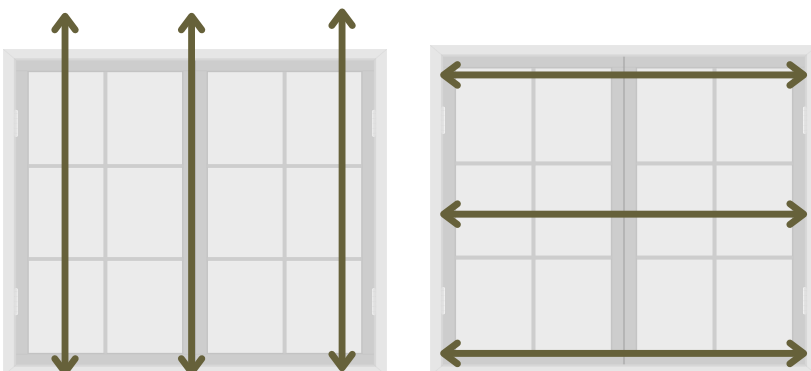

Scan here to watch our measuring video.

Need help?

Our customer service team is here to help!
Call 01205 601115 or email
sales@directordercurtains.co.uk